

# HONDA INSTALLATION INSTRUCTIONS

Accessory

FENDERWELL TRIM  
P/N 08P21-SX0-100

Application

1997 ODYSSEY

Publications No.

All 18333

Issue Date

OCT 1996

## PARTS LIST

Left front fenderwell trim

Right front fenderwell trim

Left rear fenderwell trim

Right rear fenderwell trim



## TOOLS AND SUPPLIES REQUIRED

Stubby Phillips screwdriver  
Rubber mallet  
Flat tip screwdriver  
Shop towel  
Pliers


## INSTALLATION

Before You Begin:


- In these instructions the illustrations show the right side fenderwell trim being installed. The same procedure applies to installing the left side fenderwell trim.
- The fenderwell trims are identified by a label attached to the inside surface.
- Use care when removing and installing the retaining clips for the inner fenderwell.
- The area to be covered with the fenderwell trims should be clean and waxed with a high-quality paste wax.

## Installing the Front Fenderwell Trim


1. Turn the steering wheel all the way counterclockwise to provide access to the right front fenderwell.

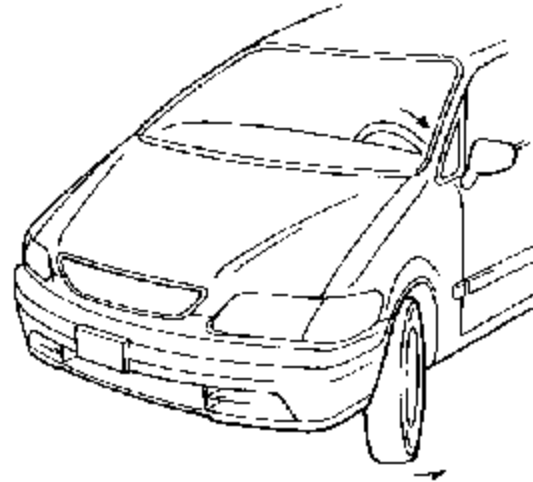


2. Remove the inner fender (four expansion clips and one self-tapping screw). Retain the expansion clips and the self-tapping screw; they will be used later.

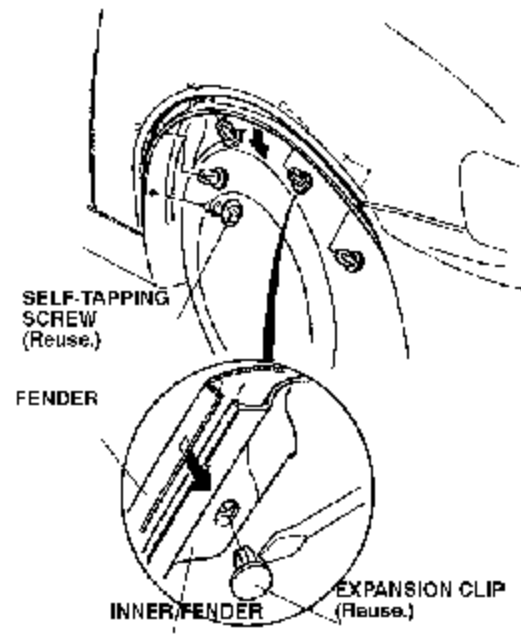

3. Pull down the inner fender, then position the fenderwell trim between the inner fender and the fender flange. Align the fenderwell trim with the front bumper (as indicated by the arrow).

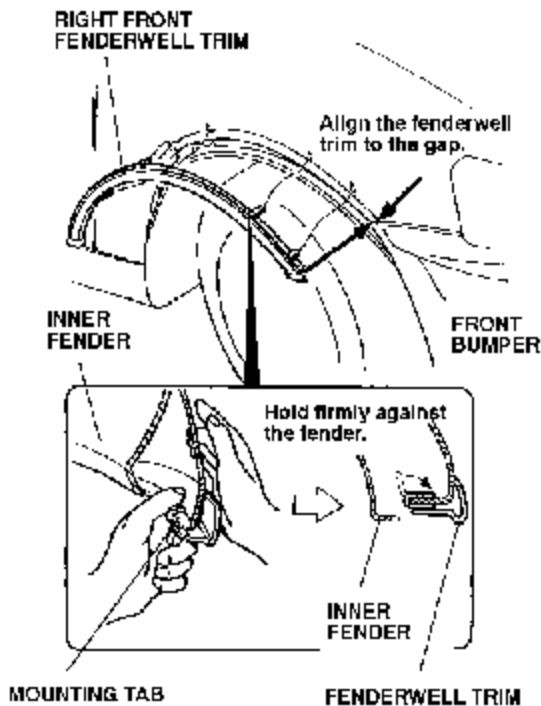


4. While holding the fenderwell trim firmly against the fender, bend the four mounting tabs around the fender flange.
5. Squeeze the tabs with pliers padded with a shop towel.

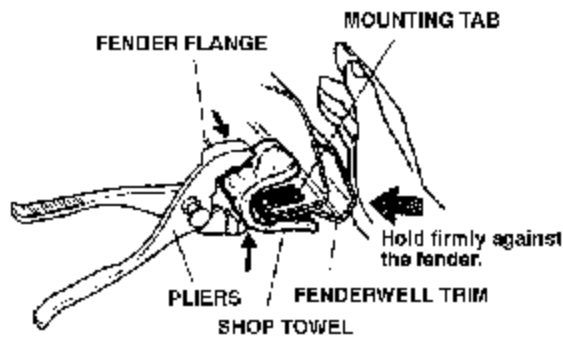


6. Reinstall the self-lapping screw and the expansion clips removed in step 2.
7. Turn the steering wheel all the way clockwise, and repeat steps 2 through 6 to install the left front fenderwell trim.

### Installing the Rear Fenderwell Trim

8. Remove the inner protector from the fender flange.

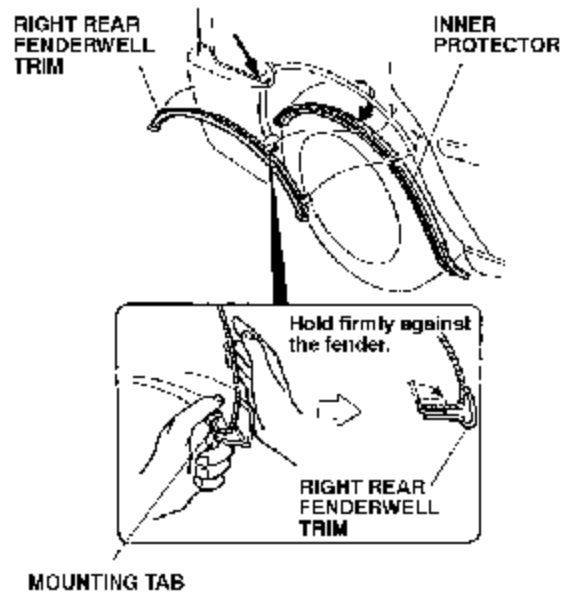

9. Position the fenderwell trim on the fender flange, then align the rear end with the rear bumper (as indicated by the arrow). While holding the fenderwell trim firmly against the fender, bend the four mounting tabs around the fender flange.
10. Squeeze the tabs with pliers padded with a shop towel.
11. Using a rubber mallet, drive the inner protector over the fender and fenderwell trim.

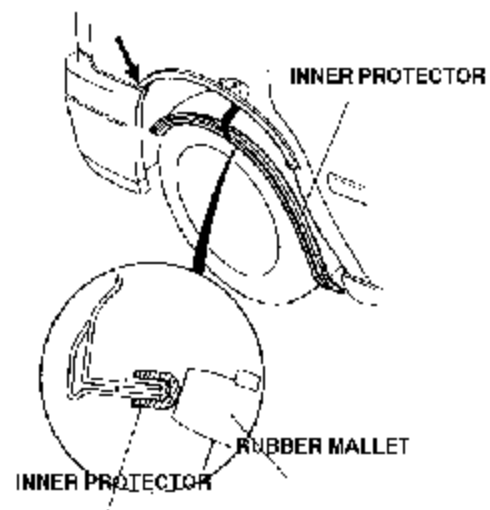

12. Repeat steps 8 through 11 to install the left rear fenderwell trim.