

HONDA INSTALLATION INSTRUCTIONS

Accessory
SECURITY SYSTEM
OPTIONS


Application
1998 ODYSSEY

Publications No.
All 19319
Issue Date
NOV 1997

PARTS LIST

Siren Kit: P/N 08E49-SX0-103F

Siren

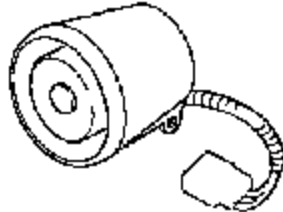

Siren bracket**b**



2 Washer-bolts, 6 x 16 mm



Washer-bolt, 6 x 32 mm




Flange nut, 6 mm



Option Harness Kit: P/N 08E57-SX0-102

Security system
options wire harness

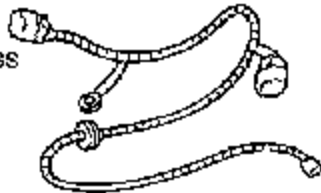

8 Long wire ties



2 Short wire ties




Ground bolt




Hood Switch Kit: P/N 08E49-SX0-100G

Hood switch

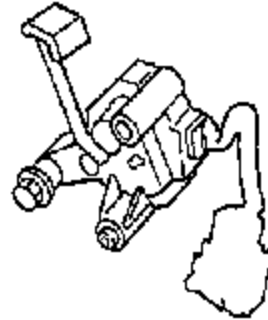

Hood switch bracket

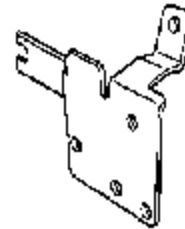

Bracket B



Bracket C



Flange bolt, 6 x 12 mm
(Black)



2 Washer-bolts, 6 x 12 mm



TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver

10 mm and 14 mm Combination wrenches


Utility knife

Electrical tape

Diagonal cutters

Rivnut installation tool kit

Illustration of the Security System Options Installed on the Vehicle

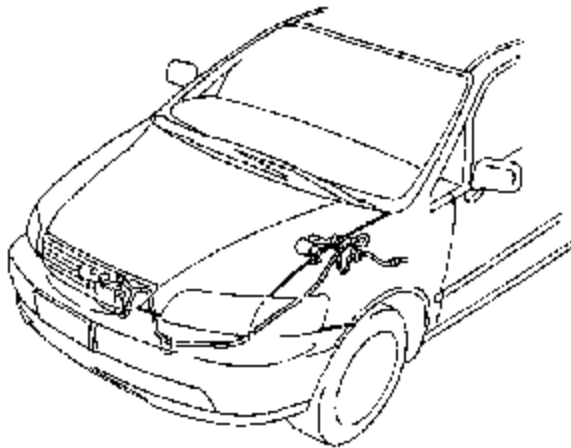


INSTALLATION

NOTE: These kits are designed to be used exclusively with the Honda Security System. Before you install the siren and the hood switch, make sure you have the recommended Security System Attachment Kit on hand.


Installing the Siren Harness

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.

3. Remove the dashboard lower cover (three self-tapping screws, seven clips, and one connector).

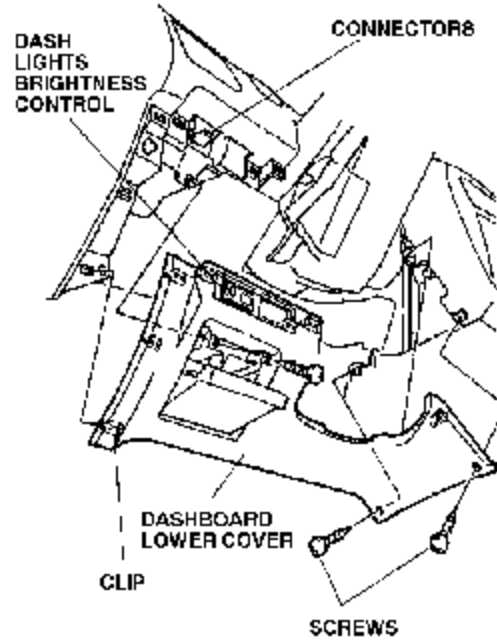


4. Remove the knee bolster (four bolts).

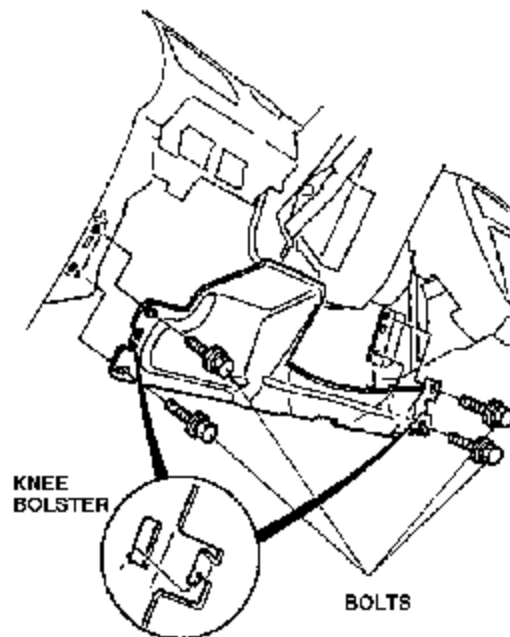


- Route the security system options wire harness through the engine compartment bulkhead:

Without Fog Lights

- Turn over the floor carpet under the dashboard on the driver's side of the car, and remove the insulator by first removing a breakaway section of the insulator indicated by the slits. Then, remove the grommet concealed under the insulator from the bulkhead.

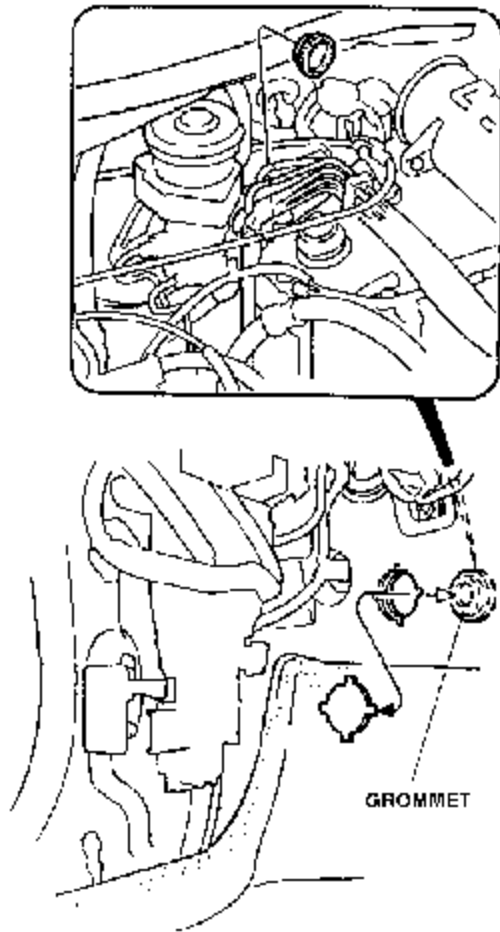


- From the engine compartment, route the 5 pin connector of the security system options wire harness through the hole in the bulkhead and into the driver compartment. Seat the grommet on the security system options wire harness into the hole in the bulkhead.

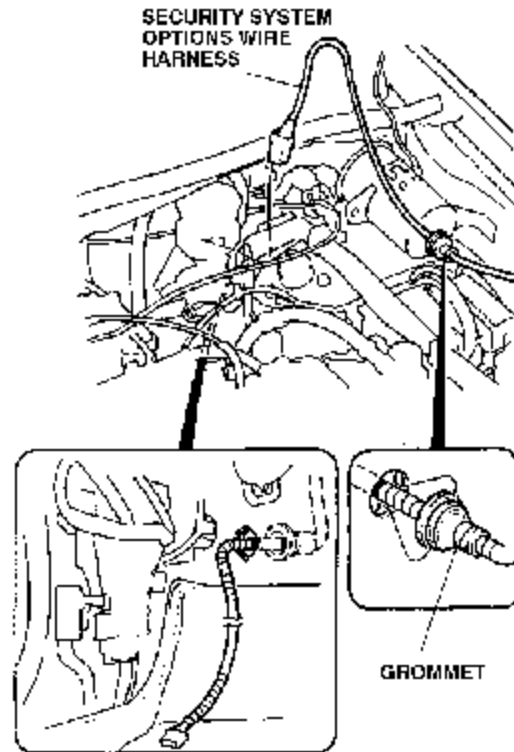

With Fog Lights

- Inside the engine compartment, remove the wire ties securing the fog light wire harness.
- Inside the driver compartment, remove the wire ties securing the fog light wire harness.
- Pull the grommet of the fog light wire harness out of the bulkhead and into the driver compartment. Using a utility knife, carefully cut and remove the grommet from the harness.
- From the engine compartment, route the 5-pin connector of the security system options wire harness into the driver compartment through the hole in the bulkhead.


- Inside the driver compartment, carefully cut the rubber grommet.

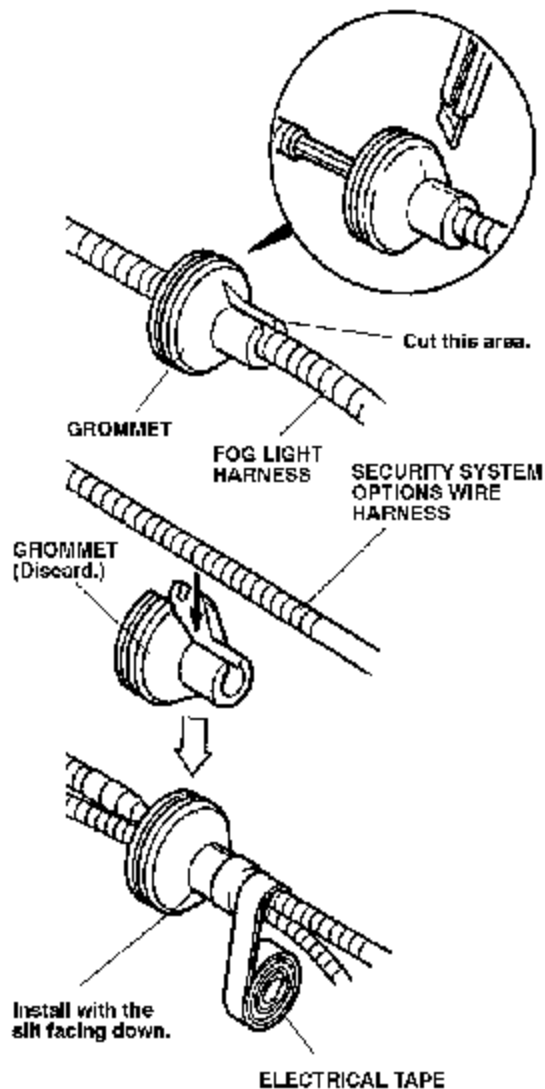

- Pull the 5-pin connector through the fog light wire harness grommet until the tube ends of both harnesses meet. With the slit in the grommet facing down, wrap electrical tape around both sides of the grommet.
- Seat the grommet on the two wire harnesses into the hole in the bulkhead.


Routing the Wire Harness

6. Continue routing the security system wire harness through the engine compartment, and secure it to the vehicle harness with seven long wire ties in the areas shown.

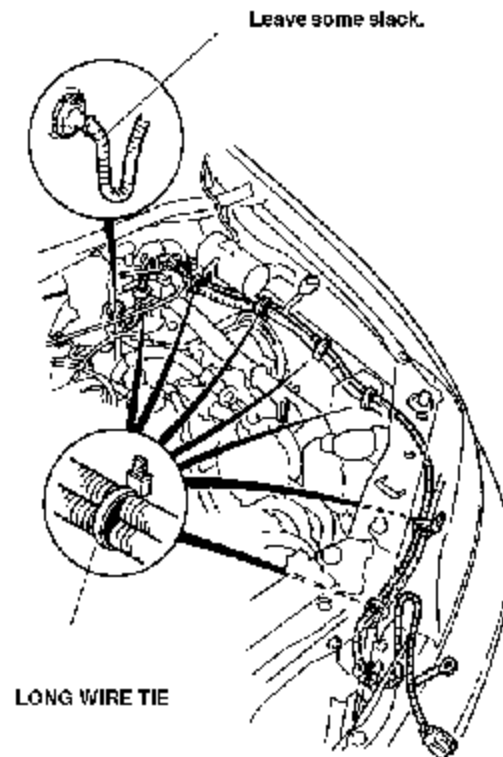

7. Remove the bolt from the bulkhead upper frame, route the security system options wire harness over the bolt hole, and loosely reinstall the bolt.


8. Secure the harness with one long wire tie in the area shown.

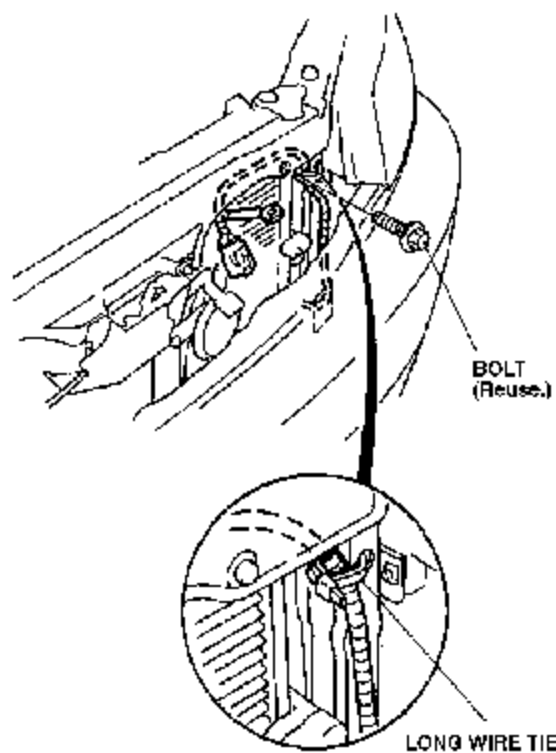


If you're installing a hood switch, continue with step 9. Otherwise, go to step 14.

Installing the Hood Switch

9. Remove the bolt from the hood switch. Position the hood switch on the hood switch bracket, and install this bolt and the black 6 x 12 mm flange bolt from the kit.

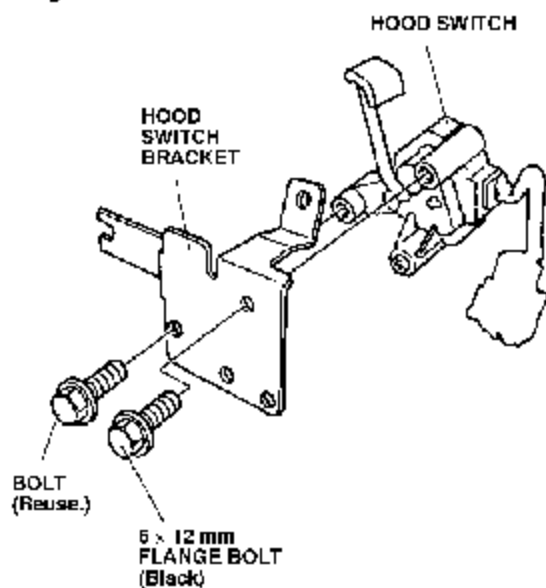


10. Loosen the top hood lock mounting bolt, and attach the hood switch bracket with this bolt and one 6 x 12 mm washer-bolt from the kit.

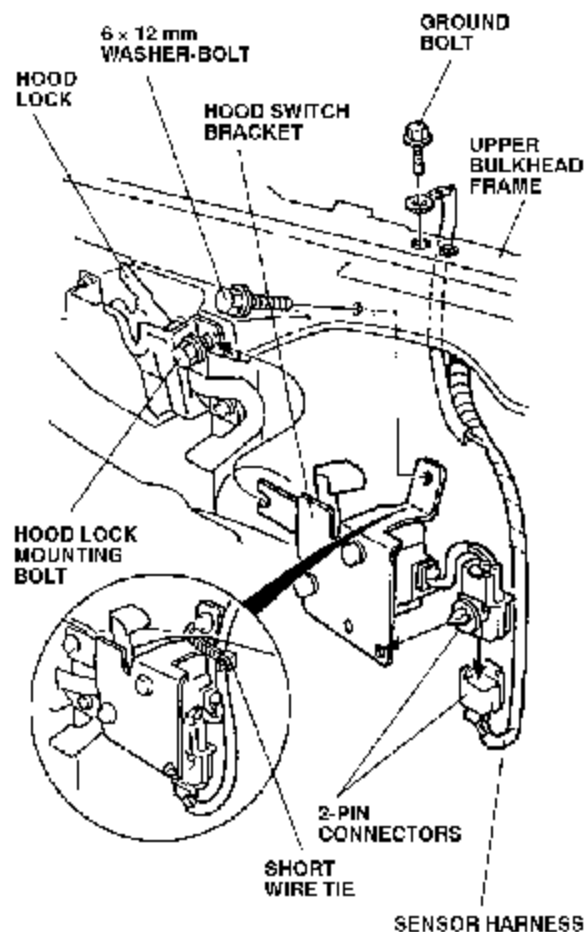

11. Attach the ground terminal of the security system options wire harness to the upper bulkhead frame with the ground bolt included in the kit.
12. Connect the 2-pin connector of the security system options wire harness to the 2-pin connector from the hood switch. Secure the harnesses to the hood switch bracket with one short wire tie.


13. Install bracket C and bracket B to the hood with the remaining 6 x 12 mm washer-bolt.

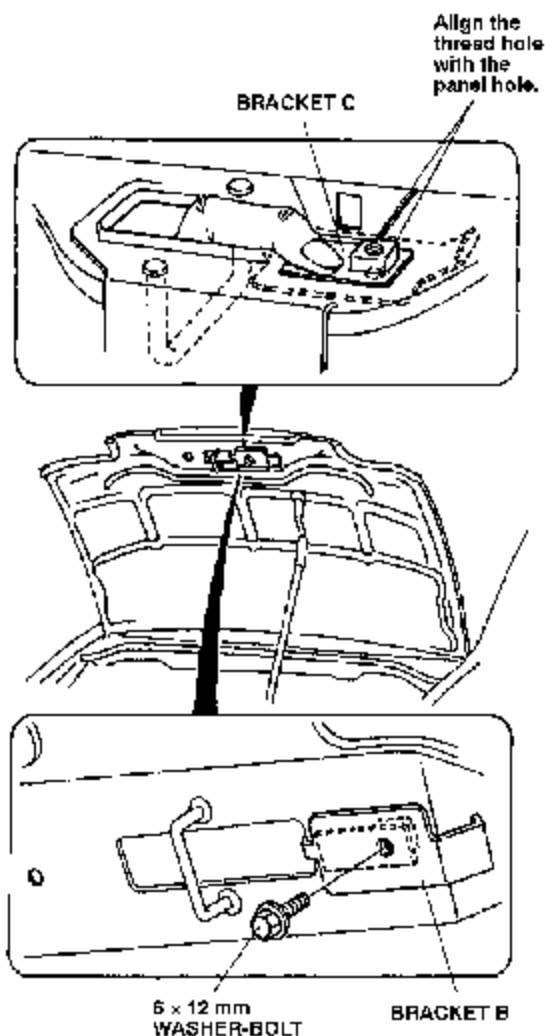


If you're installing a siren, continue with step 14. Otherwise, go to step 17.

Installing the Siren


14. Position the siren on the siren bracket, and install the 6 x 32 mm washer-bolt and the 6 mm flange nut. Note the bracket installation direction.

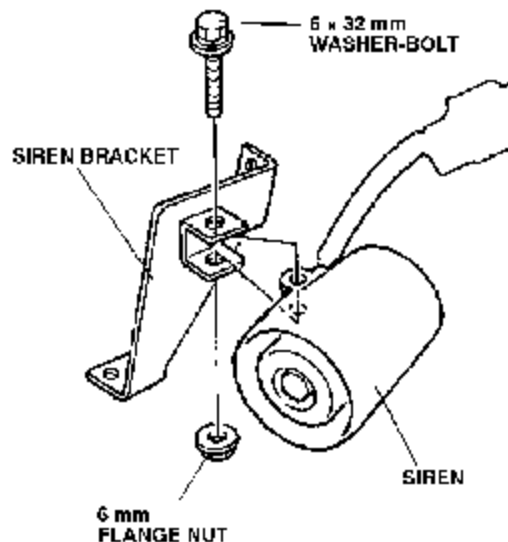

15. Remove the bolt, then attach the siren bracket using the two 6 x 16 mm washer-bolts as shown, and tighten these bolts and the bolt loosely installed in step 7.

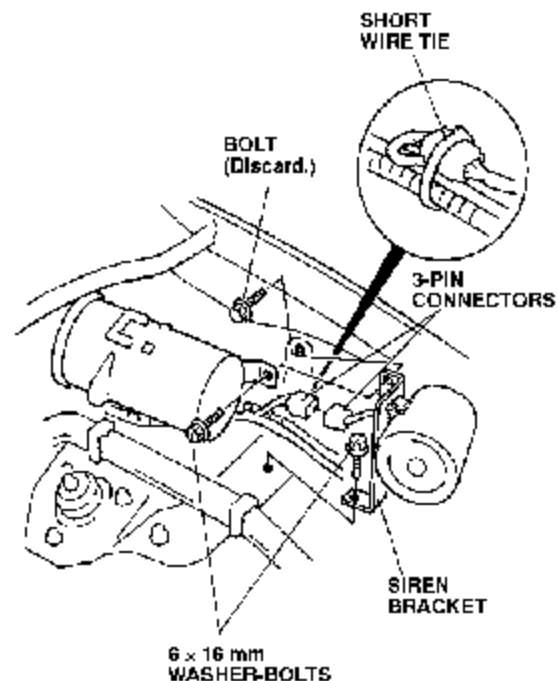

16. Connect the 3 pin connector from the siren to the 3-pin connector of the security system options wire harness. Secure the connector to the vehicle harness with a short wire tie.
17. Locate the 3-pin connector blue-taped to the security system wire harness, and remove the blue tape to free the connector.
18. Connect the security system options wire harness 3-pin connector to the security system wire harness 3-pin connector.

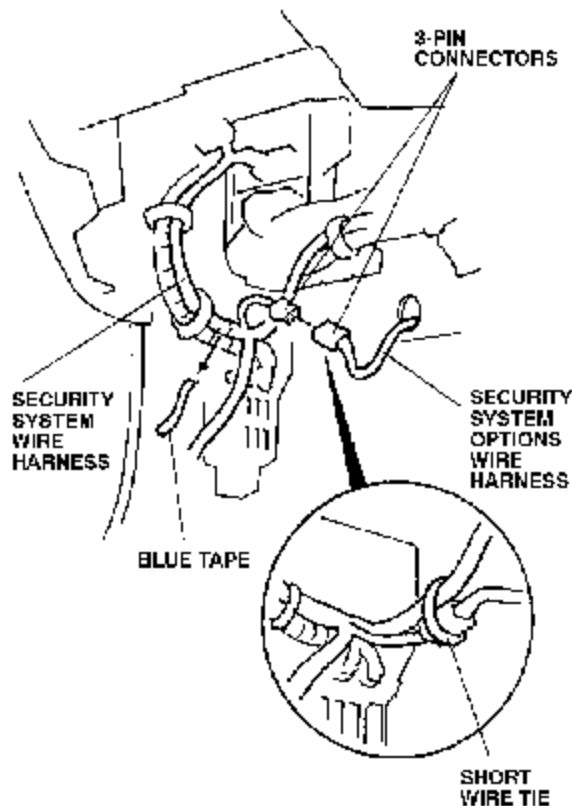

19. Secure the security system options wire harness to the security system using a short wire tie.
20. Check that all wire harnesses and cables are routed properly and all connectors are plugged in.
21. Reinstall all removed parts.
22. Connect the negative cable to the battery.
23. Check the operation of the security system according to its Owner's Manual.
24. Enter the customer's radio anti-theft code, and reset the radio station presets.
25. Reset the clock.